



NOTE:  
BRIDGE CONTROL PANEL  
SEE DWG 33002 FOR COMPONENT  
WIRING DIAGRAM

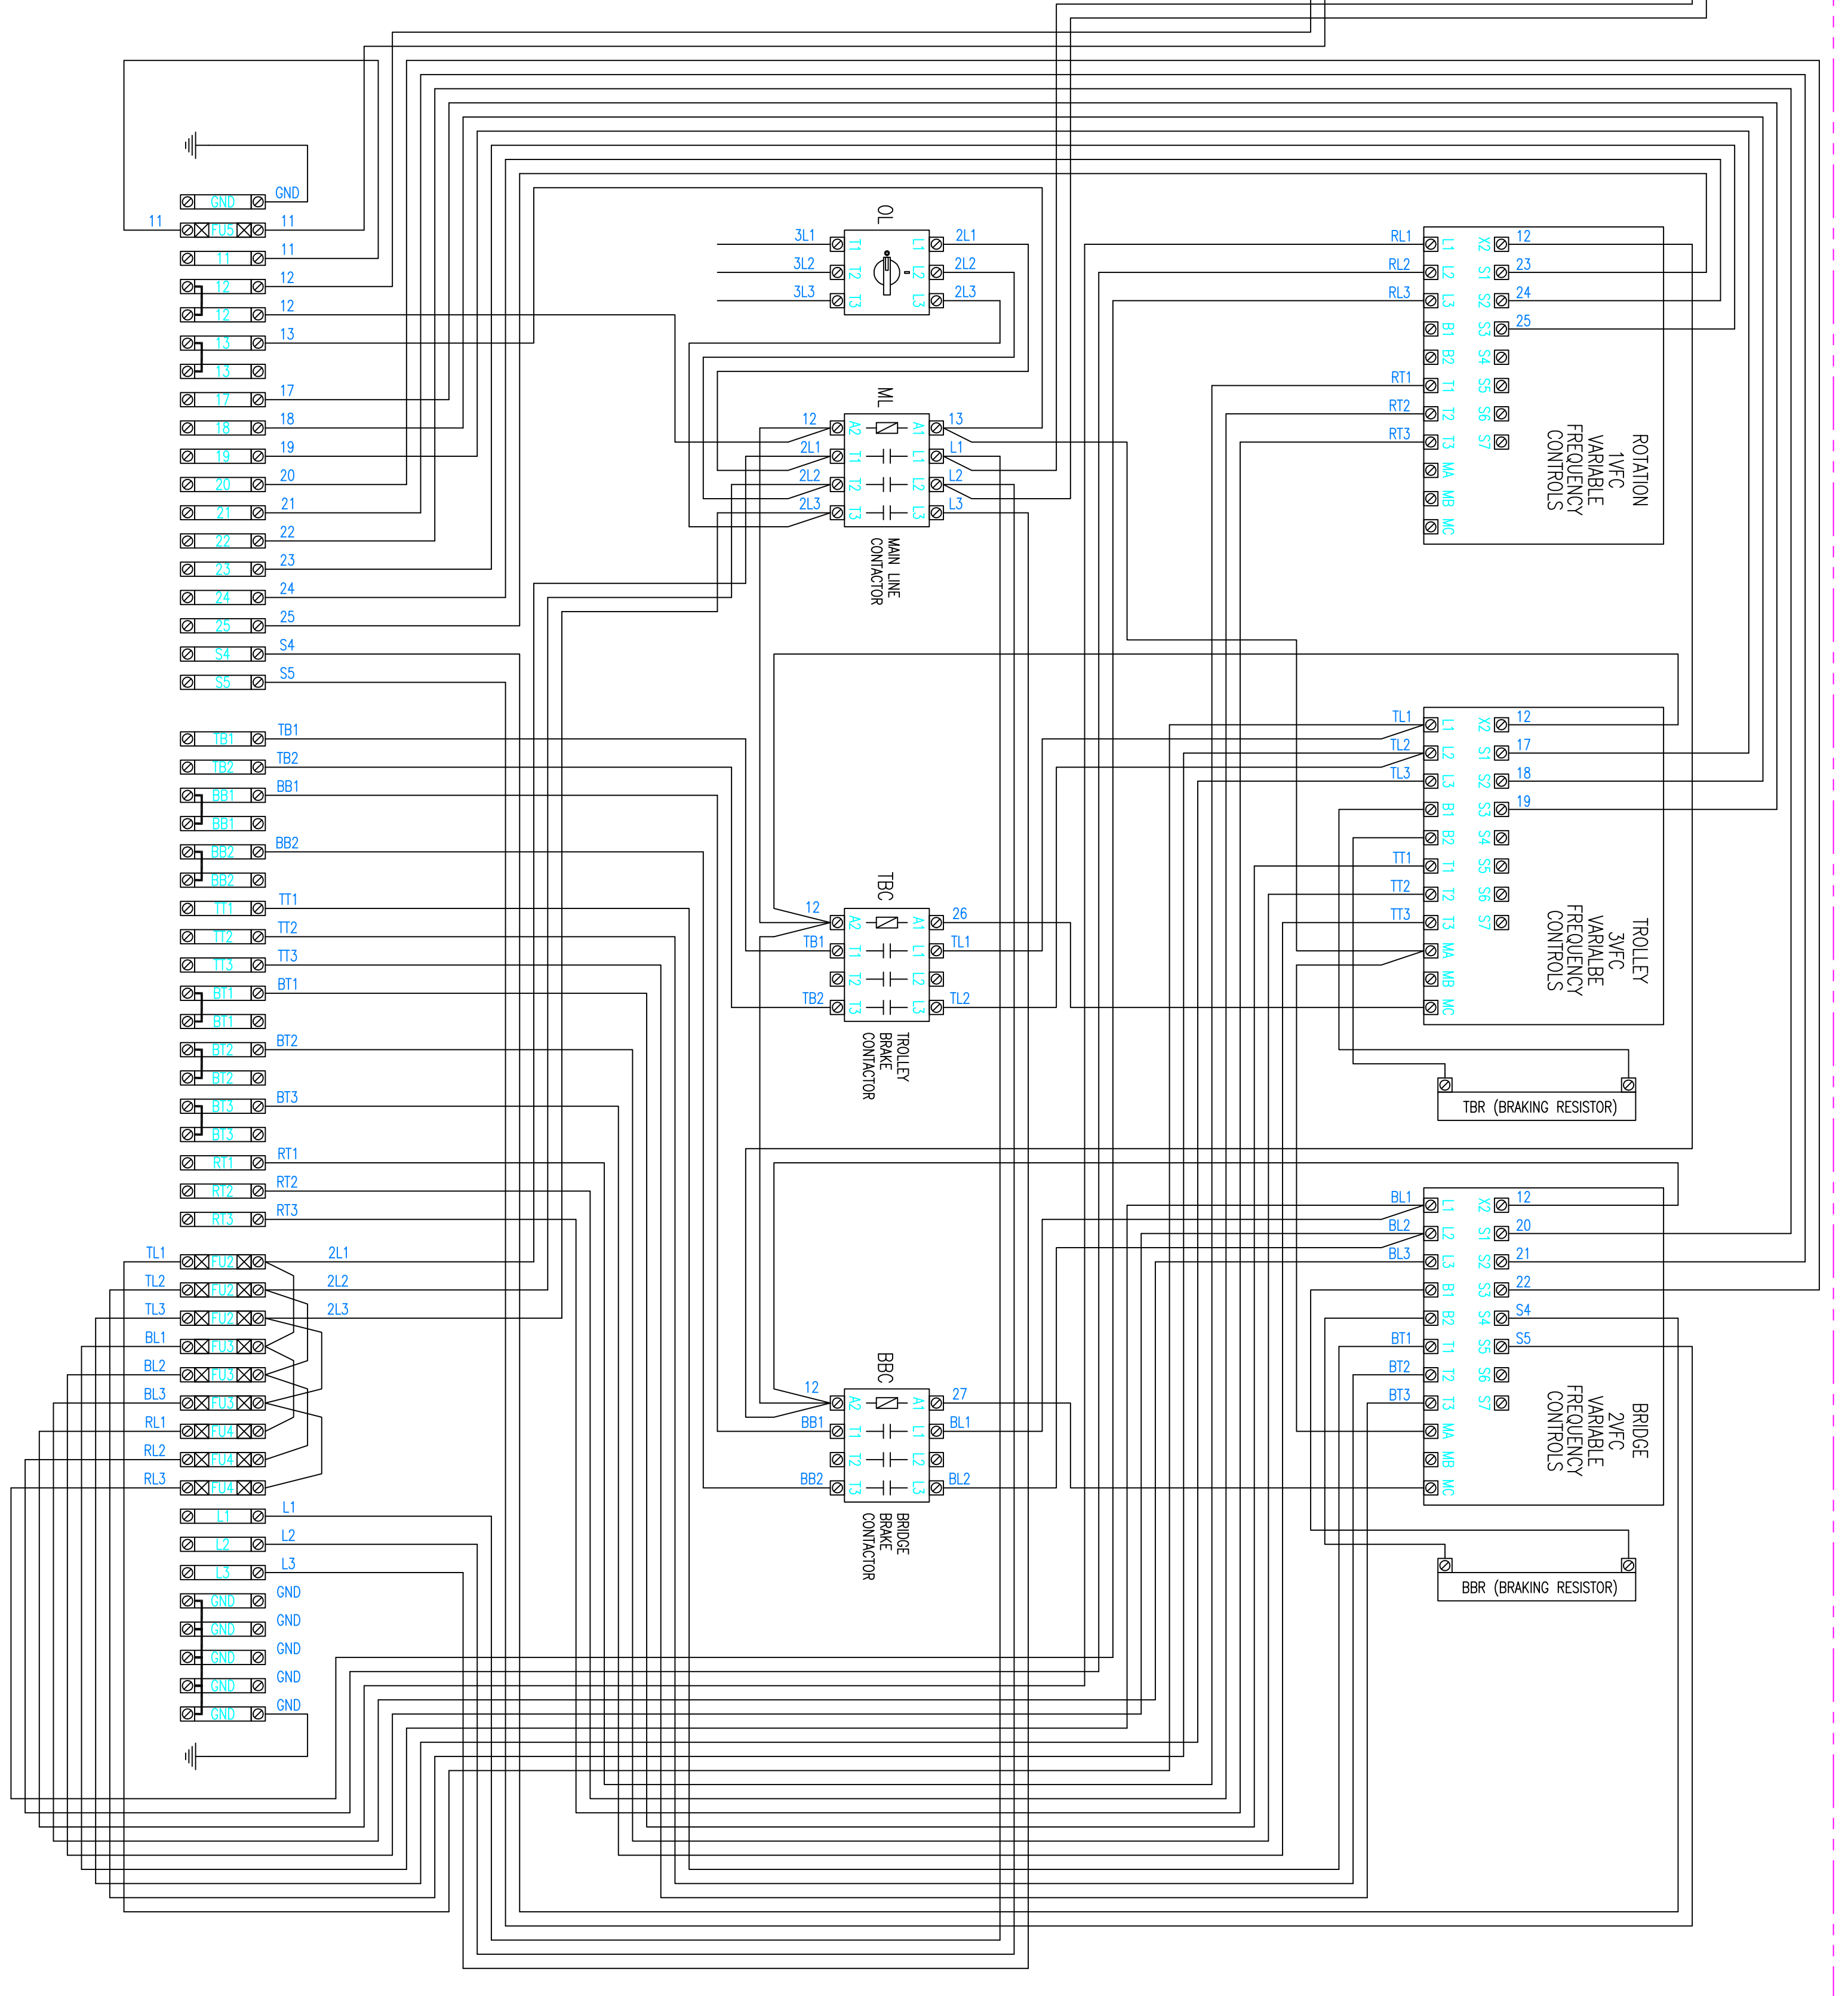

<b>RAPISTAK</b> 2025 Electric Blasdell, NY 14219 Phn: 716-822-2800 Fax: 716-822-2806 Web: www.rapistak.com	CUSTOMER NAME:	SCALE: 1"=1"	TITLE: WIRING DIAGRAM FOR FULLY MOTORIZED STACKER, TWO SPEED HOIST 208V/200V, 240V/230V/220V, 480V/460V/440V, 3PH, 50/60HZ FOR XN10 2 FALL CHIAN HOIST, 16/4 FPM
	CHECKED BY: 14219	DATE: 9/25/13	REFERENCE NO.:
	DRAWN BY: JIM K.	DRAWING NO.: 33003	REVISION:

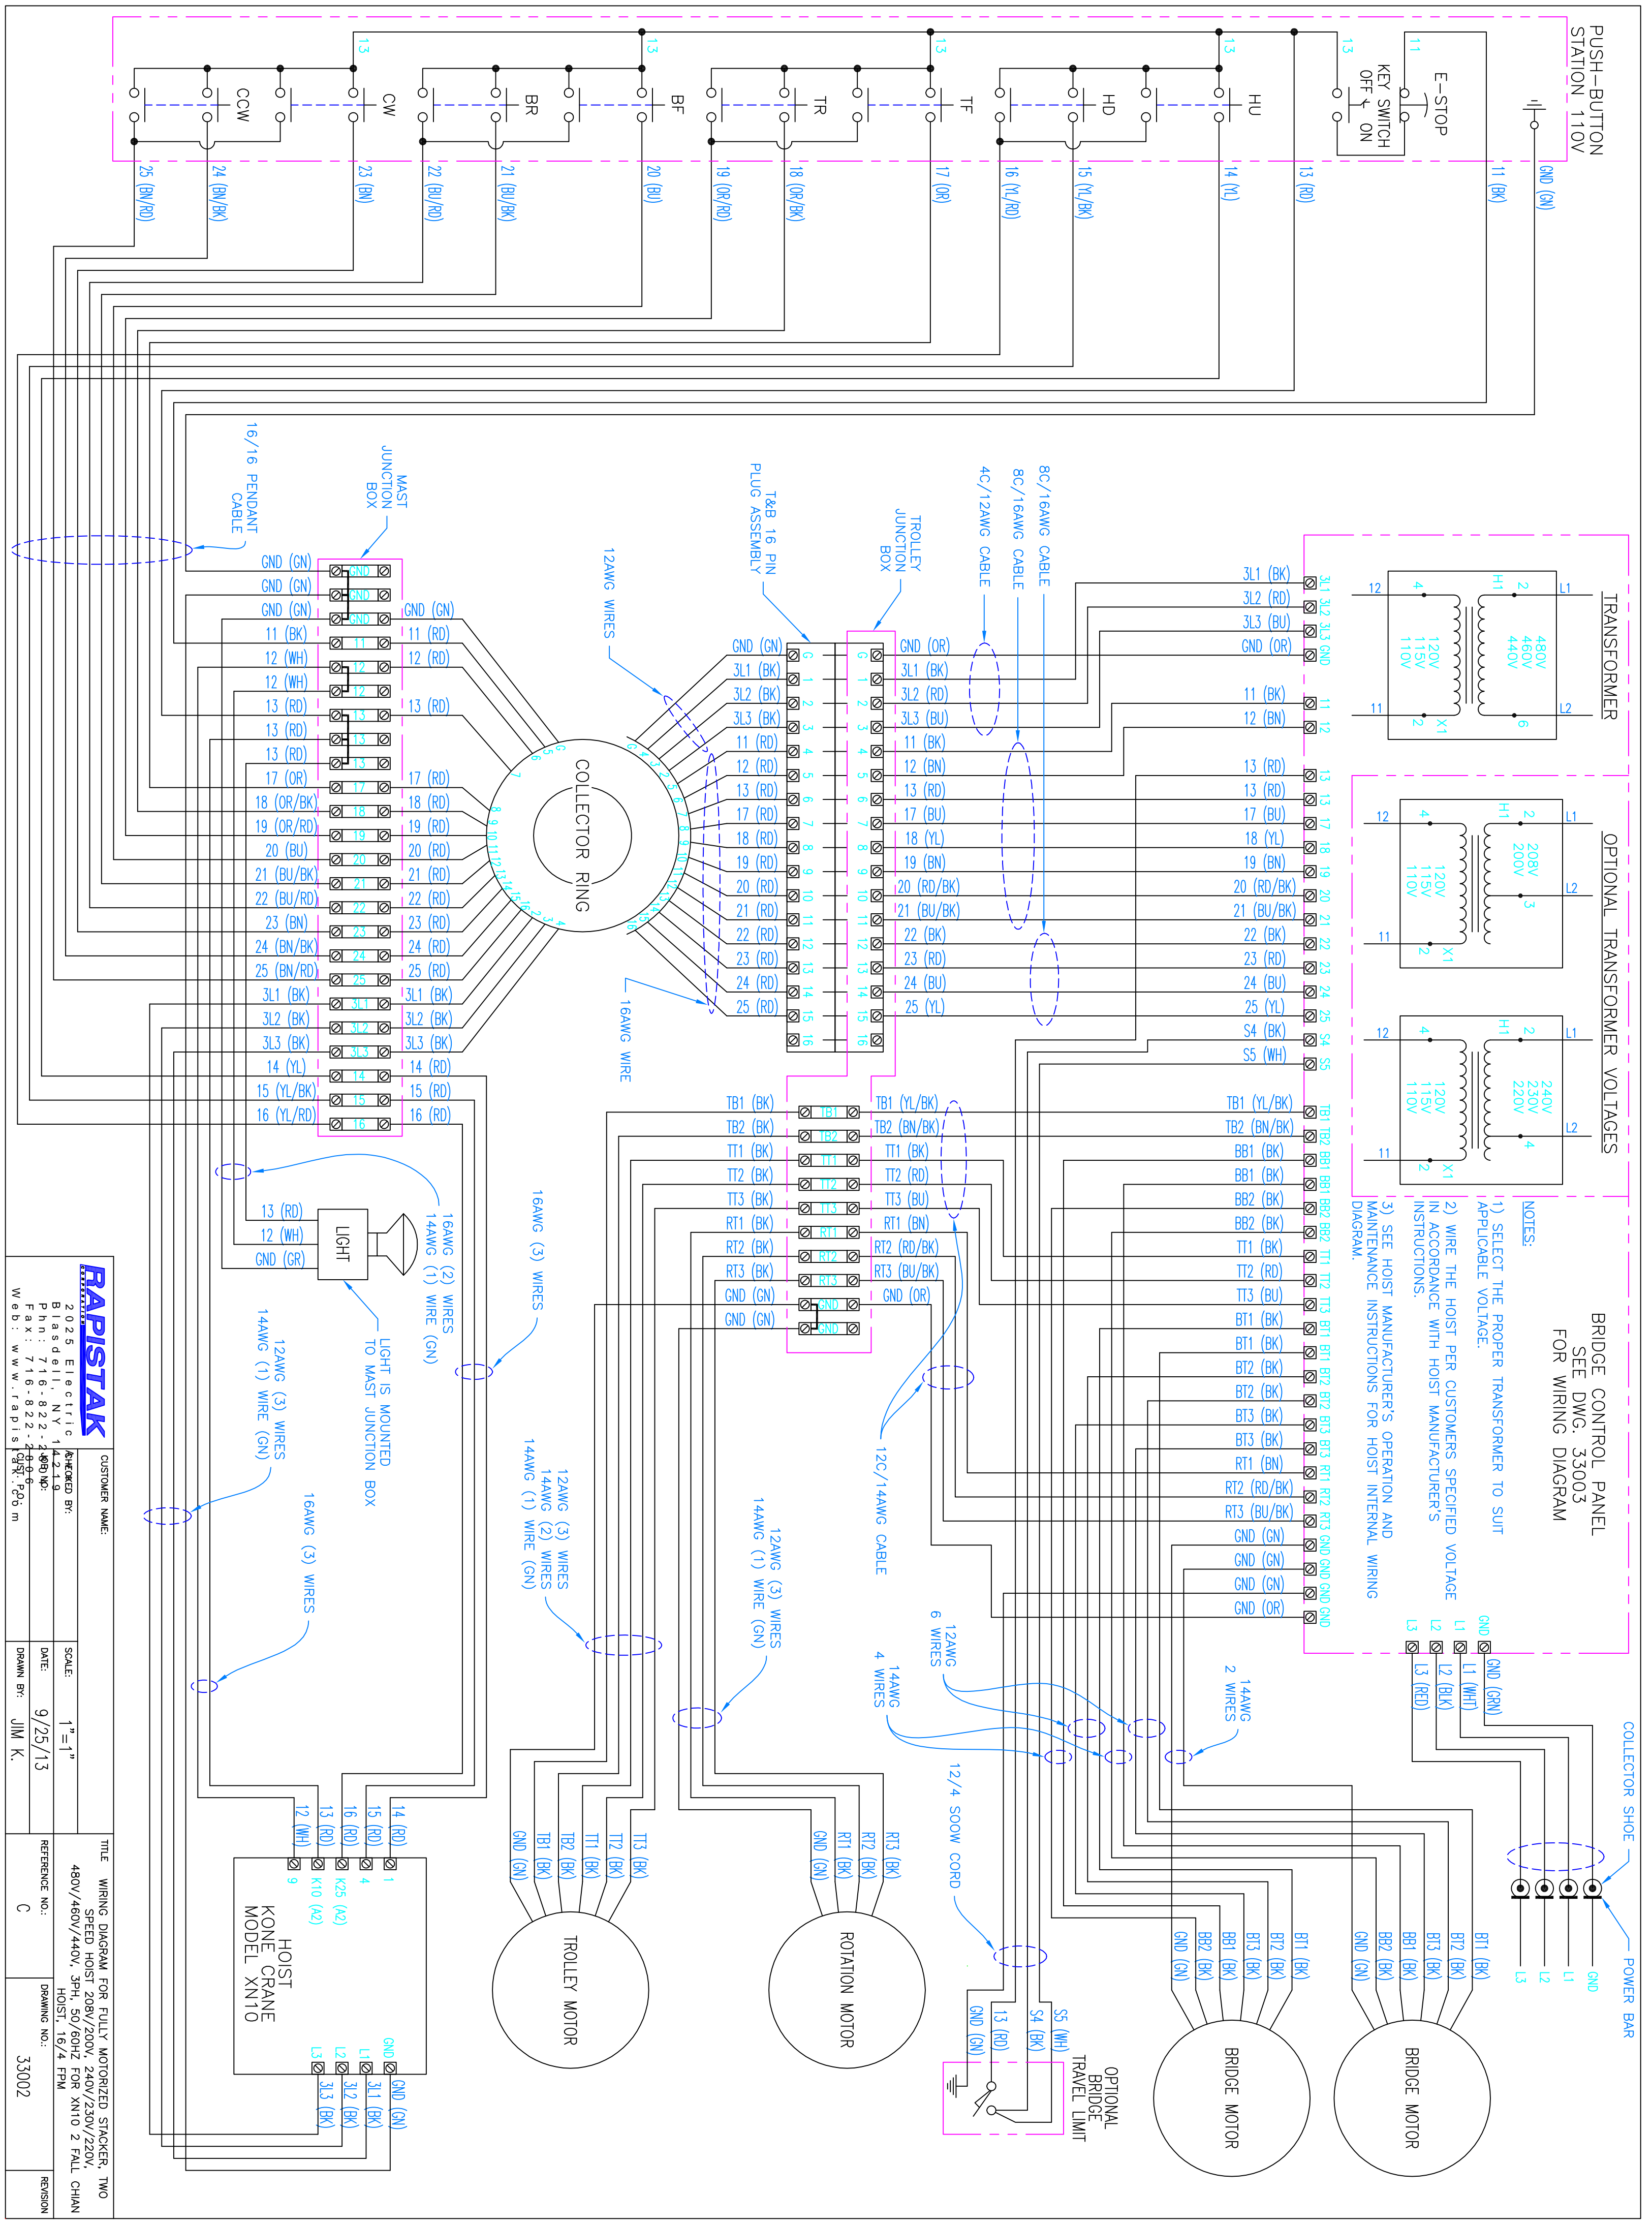

PUSH-BUTTON STATION 110V

TRANSFORMER

OPTIONAL TRANSFORMER VOLTAGES

BRIDGE CONTROL PANEL  
SEE DWG. 33003  
FOR WIRING DIAGRAM

NOTES:  
1) SELECT THE PROPER TRANSFORMER TO SUIT APPLICABLE VOLTAGE.  
2) WIRE THE HOIST PER CUSTOMERS SPECIFIED VOLTAGE IN ACCORDANCE WITH HOIST MANUFACTURER'S INSTRUCTIONS.  
3) SEE HOIST MANUFACTURER'S OPERATION AND MAINTENANCE INSTRUCTIONS FOR HOIST INTERNAL WIRING DIAGRAM.

COLLECTOR SHOE  
POWER BAR

**RAPISTAK**

2025 Electric  
Blasdell, NY 14219  
Ph: 716-822-4900  
Fax: 716-822-4906  
Web: www.rapistak.com

CUSTOMER NAME:  
DRAWN BY: JIM K.

SCALE: 1"=1"  
DATE: 9/25/13  
DRAWING NO.: 33002  
REVISION

